



Forged carbon steel gate valve TRIM5 with integral body flanges Class 150 PN20 full bore for petroleum industry, steam, oil and gas and high pressure.

Rising non rotating stem with bolted bonnet.

Graphite packing and stainless steel + graphite bonnet gasket.

Compatible with explosive atmosphere, ATEX Zone 1&21 and Zone 2&22.











014/68/UE ISO 9001 : 2015



**Size:** DN15 to DN50 (NPS 1/2" to 2")

**Connection:** Flanges Class 150 PN20 RF

Min Temperature : -29°C Max Temperature : +425°C Max Pressure : 20 Bars

**Specifications:** Rising non rotating stem (OS&Y)

Bolted bonnet and packing

**Full bore (product evolution in standard bore)** 

Materials: Forged Carbon steel ASTM A105N





## **SPECIFICATIONS:**

- Full bore (product evolution in standard bore)
- Integral body flanges
- Rising non rotating stem ( OS & Y )
- Bolted bonnet
- Bolted packing
- Forged carbon steel A105N
- Full stellite (Trim 5)
- Flanges R.F. Class 150 (PN20)

## USE:

- Petroleum industry, steam, high pressure
- Min and max Temperature Ts: 29°C to + 425°C
- Max Pressure Ps : 20 bars ( see graph )

#### FLOW COEFFICIENT Kvs (M3/h):

DN (mm)	15	20	25	40	50
NPS (")	1/2"	3/4"	1"	1"1/2	2"
Kvs ( m3/h ) Full bore	10	23	47.2	75.2	93.4
Kvs ( m3/h ) Standard bore	4.7	10.4	23.3	69.2	90.8


## PRESSURE / TEMPERATURE RELATION :

Pressure (bar)	19.6	19.6	19.6	19.2	17.7	15.8	14	12.1	10.2	8.4	7.4	6.5	5.6
Temperature (°C)	-29	0	38	50	100	150	200	250	300	350	375	400	425

## PRESSURE / TEMPERATURE GRAPH:

## **Pressure**

## (Bars)

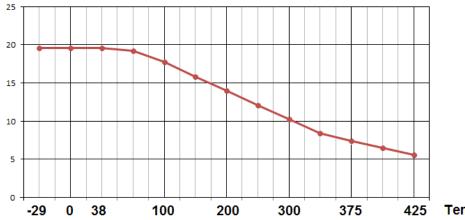

Temperature (°C)






## RANGE:

• Forged carbon steel A105N gate valve with integral body flanges Class 150 (PN20) R.F. Ref.130 from DN 15 to 50 (NPS 1/2" to 2")

#### **MATERIALS:**

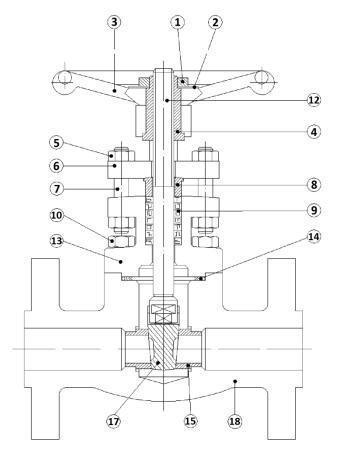


Item	Designation	Materials		
1	Handwheel nut	Carbon steel		
2	ID plate	Aluminium		
3	Handwheel	Carbon steel		
4	Yoke nut	ASTM A473 type 416		
5	Packing nut	ASTM A194 2H		
6	Gland flange	ASTM A105		
7	Packing studs	ASTM A276 type 410		
8	Gland	ASTM A276 type 410		
9	Packing	Graphite		
10	Screw	ASTM A193 B7		
12	Stem	ASTM A276 type 410		
13	Bonnet	ASTM A105N		
14	Gasket	ASTM A182 F316 + graphite		
15	Seat	ASTM A276 Tp 410 Stellite		
17	Wedge	ASTM A182 F6a Stellite		
18	Body ASTM A105N			





## SIZE ( in mm ):

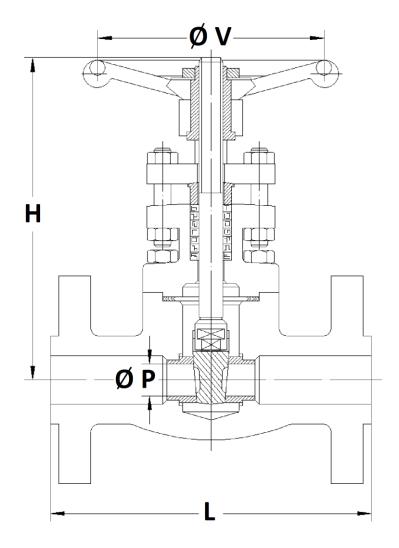


DN (mm)	15	20	25	40	50
NPS (")	1/2"	3/4"	1"	1"1/2	2"
Ø P (full bore)	14	18	24	36.5	48.5
Ø P (standard bore)	9	12	17	28	36
L	108	117	127	165	178
H (opened)	185	210	240	285	315
Ø V	80	80	110	130	180
Weight (Kg)	3.2	4.7	6.6	12.4	15
Ref.	130015	130020	130025	130040	130050





## FLANGES SIZE ( in mm ):

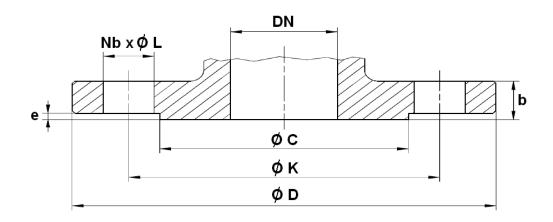

DN (mm)	15	20	25	40	50
NPS (")	1/2"	3/4"	1"	1"1/2	2"
øс	34.9	42.9	50.8	73	92.1
Ø D	89	98.5	108	127	152.5
øк	60.5	70	79.5	98.5	120.5
Nb x Ø L	4 x 16	4 x 16	4 x 16	4 x 16	4 x 19
b	11.5	13	14.5	18	19.5
е	1.6	1.6	1.6	1.6	1.6





#### **STANDARDS:**

- Fabrication according to ISO 9001:2015
- DIRECTIVE 2014/68/EU: CE N° 0036 Risk category III module H
- · Certificate 3.1 on request
- Designing according to ISO 15761 and API 602 8th
- Pressure Tests according to API 598, table 6
- Valves approved by the main oil industries ( certificates on request )
- ATEX Group II Category 2 GD T3 Zone 1 & 21 Zone 2 &22 (optional marking) according to directive 2014/34/EU
- Integral body flanges R.F. according to ASME B16.05 Class 150
- Length according to EN 558 Series 3 (ASME B16.10 Table 1, Column 7)

**ADVICE**: Our opinion and our advice are not guaranteed and Lauridsen Group shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.





## **INSTALLATION INSTRUCTIONS**

#### **GENERAL GUIDELINES:**

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid,pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

#### **INSTALLATION INSTRUCTIONS:**

- Before installing the valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will
  not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection, the
  working of the valve and can even cause a rupture. To be sure, place the kit in position to ensure the
  assembling will work.
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.
- Tighten the bolts in cross.
- It's recommended to operate the valve (open and close) 1 to 2 times per year
- Keep greased the stem so that the valve remains easy to open or close.



 For an installation in ATEX area, check the conductivity between the valve, the upstream pipe and the downstream pipe and make sure the pipe is connected to the earth.