





**Certificate 3.1** 

**Size:** DN 40 to 600

**Ends:** Between flanges PN10/16

**Min Temperature :** - 10°C

Max Temperature: +80°C in NBR, 110°C in EPDM, 180°C in FKM

**Max Pressure:** 16 Bars up to DN200 (10 bars over)

**Specifications:** Wafer swing check valve

Vertical or horizontal position

Between flanges type

Materials: Carbon steel or Stainless steel




#### **SPECIFICATIONS:**

- · Wafer swing check valve
- · Vertical position with ascendant fluid or horizontal position ( respect the flow direction indicated by the arrow )
- Between flanges PN10/16
- · With hoisting eye
- Short length
- Economical solution
- · Monobloc disc and stem for a better mechanical strength
- Integrated body gasket

#### USE:

- Heating, water distribution and watering
- Min and max Temperature Ts: 10°C to + 80°C for carbon steel NBR type Ref.351
- Min and max Temperature Ts: 10°C to + 110°C for carbon steel EPDM type Ref.364
- Min and max Temperature Ts: 10°C to + 180°C for stainless steel FKM type Ref.365
- Max Pressure Ps : 16 bars up to DN 200 included and 10 bars over
- Do not use with pulsatory speed
- Max Speed: 3 M. / Sec.

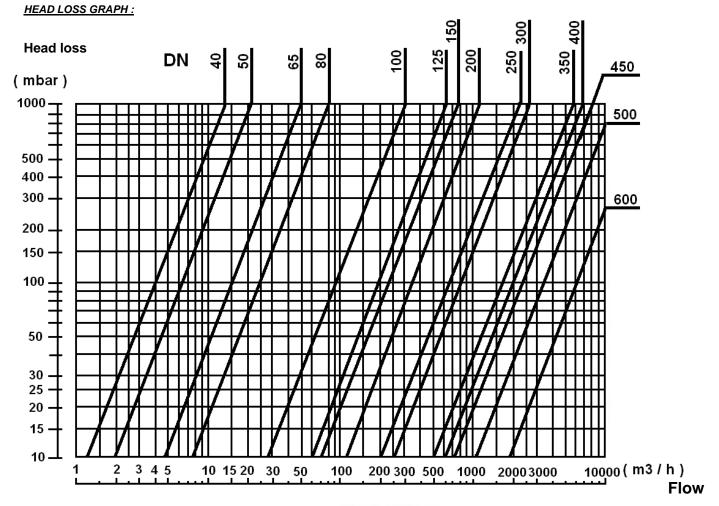




### RANGE:

- Galvanized carbon steel body with NBR gasket between flanges PN16 Ref. 351 DN40 to DN 300
- Galvanized carbon steel body with EPDM gasket between flanges PN16 Ref. 364 DN40 to DN 600
- Stainless steel body with FKM gasket between flanges PN16 Ref. 365 DN40 to DN 600
- Stainless steel body with FKM gasket between flanges PN10 Ref. 365401 and 365451 DN400 to DN 450


### **MATERIALS**:

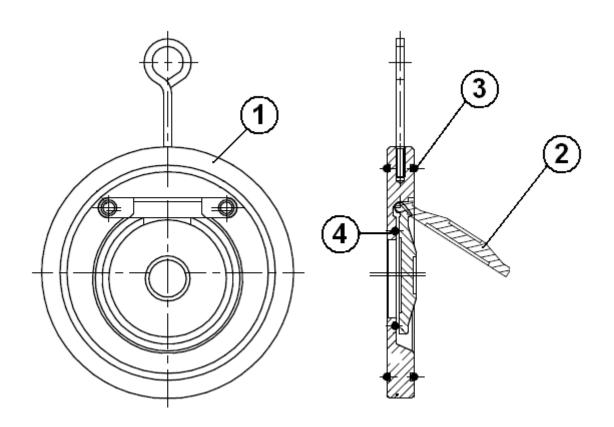

Item	Designation	Materials 351	Materials 364	Materials 365			
1	Body	Carbon steel with chromium plated Q235	Carbon steel with chromium plated Q235	ASTM A351 CF8M			
2	Disc	Carbon steel with chromium plated Q235	5 ASTM A351 CF8M				
3	Seat	NBR EPDM		FKM			
4	Gasket	NBR	EPDM	FKM			




### SIZE BETWEEN PN16 FLANGES TYPES (in mm):

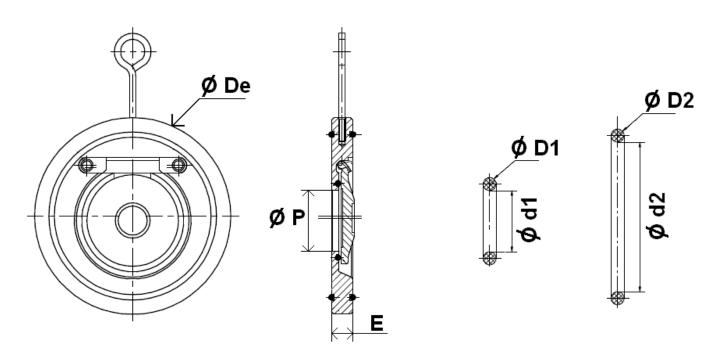

Ref.	DN	40	50	65	80	100	125	150	200	250	300	350	400	450	500	600
	E	14	14	14	14	18	18	20	22	26	32	38	44	50	56	62
	Ø De	94	109	129	144	164	194	220	275	331	386	446	497	557	619	736
351	Ø P	22	32	40	54	70	92	112	154	192	227	270	315	358	410	490
	Ø d2	73.5	84.5	104.5	112.5	140.5	164.5	193.5	249.5	295.5	314.5	387	437	488	536	632
364 / 365	Ø D2	3.5	3.5	3.7	3.7	3.7	3.5	3.7	3.7	3.5	6	8	8	8	8	8
	Ø d1	26.5	36.5	49.5	62	76.5	97.5	118.5	163.5	202.5	242	285	330	377	428	512
	Ø D1	2.35	2.35	2.7	2.7	3.7	3.5	3.5	3.5	3.5	6	8	8	8	8	8
351 / 364	Weight (in Kg)	0.69	0.86	1.2	1.49	2.42	3.29	4.72	7.92	13.73	21.04	31.5	47	70	96	135
365	Weight (in Kg)	0.68	0.9	1.27	1.53	2.47	3.42	4.8	8.7	14.03	25.1	31.5	47	70	96	135



### SIZE BETWEEN PN10 FLANGES TYPES (in mm):

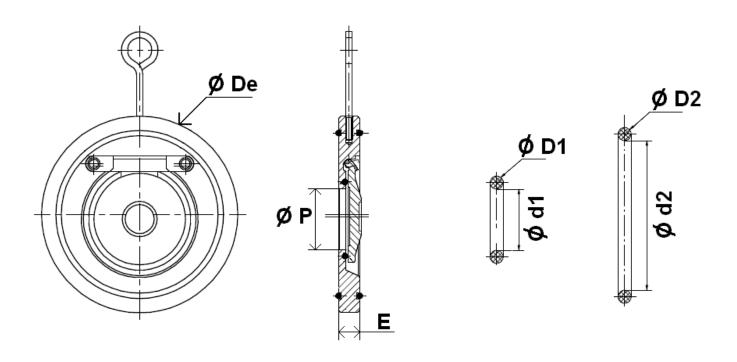

DN	400	450				
E	44	50				
Ø De	491	541				
Ø P	315	358				
Ø d2	437	488				
Ø D2	8	8				
Ø d1	330	377				
Ø D1	8	8				
Weight (in Kg)	47	70 365451				
Ref.	365401					




#### STANDARDS:


- Fabrication according to ISO 9001: 2015
- Designing according to API 594
- Pressure tests according to API 598, table 6
- DIRECTIVE 2014/68/EU: Products excluded (article 4, § 3) for Ref.351 and 364
- DIRECTIVE 2014/68/EU: CE N° 0035 Risk category III module H for Ref.365
- Certificate 3.1 on request
- Length according to EN 558 series 97 (NF 29377)
- Between flanges according to EN 1092-1 PN10/16

#### **INSTALLATION POSITIONS:**

### Vertical position ( ascendant fluid )

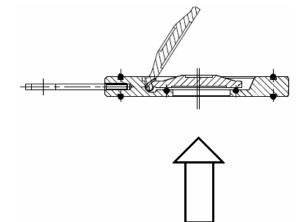

#### Horizontal position

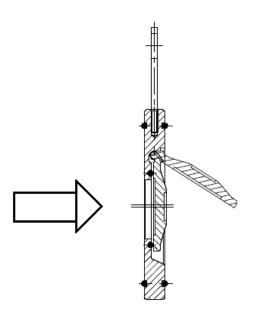

**ADVICE :** Our opinion and our advice are not guaranteed and Lauridsen industri shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.



### INSTALLATION INSTRUCTIONS

#### **GENERAL GUIDELINES:**

- Ensure that the check valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.

#### **INSTALLATION INSTRUCTIONS:**

- Before installing the check valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the check valve (upstream and downstream) are aligned (if they're not, the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the check valve unit
  will not absorb any gaps. Any distortions in the pipes may affect the thightness of the
  connection, the working of the check valve and can even cause a rupture. To be sure, place the kit in
  position to ensure the assembling will work.
- Make sure there is enough space so that the disc can be opened totally in the pipe.
- If there is a direction changing or if there's another material, it's better to take away the check valve so that
  it is outside the turbulence area ( between 3 and 5 times the ND before and after ).
- After a pump please refer to FD CEN/TR 13932 to install the check valve :
  - If it is essential to keep priming the pump, a non-return check valve can be fitted to the suction pipe at a distance L1 (straight length suction) > 10xD1 (diameter suction)
    - The check valve is designed to meet the maximum flow rate in service
  - In other cases, the non-return check valve is mounted on the discharge pipe at a distance of L2 (straight length at discharge) > 3xD2 (diameter at discharge)

Lauridsen Industri + 45 75126274 <u>www.lauridsenindustri.dk</u> info@lauridsenindustri.dk

Date: 08/17 Rev. 09
Page 7 to 7